

Data Sheet

FO Interface RS485 1Channel

RS485 1Channel/Point to Point Link

1 General _____

This device is a compact and robust modem for asynchronous data transmission in half-duplex mode at 660 or 850nm optical wavelength over glas or plastic multi mode mode fiber. According to the used fiber optic cable, data link length's up to 3000m are possible.




2 Features _____

- 1Channel RS485 FO Transceiver
- Half-Duplex data transmission
- 1 MBit data rate
- protocol-transparent
- 'Power-Good' LED
- 'Receive-Data' LED
- 9-way Sub-D connector female
- F-ST, F-SMA standardized optical connectors
- 650nm plastic optical fiber
- 850nm glas multi mode fiber
- aluminium case with DIN rail mounting latching element
- +5V or 9...30V DC power supply

O TOUR AND THE SECOND S

Pic. 2

3 Block Diagram _

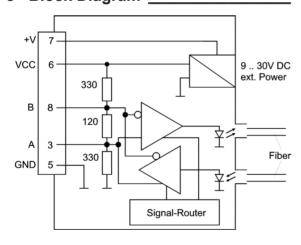

Pic. 1

4 Ordering Information

Model	Part Number	
660nm / F-SMA / POF	901RS4851K053	
with latching element	901RS4851KR53	
660nm / F-ST / POF	901RS4851K051	
with latching element	901RS4851KR51	
850nm / F-SMA / MMF	901RS4851K049	
with latching element	901RS4851KR49	
850nm / F-ST / MMF	901RS4851K045	
with latching element	901RS4851KR45	

RS485 1Channel/Point to Point Link

Rev. A02

5 CE-Declaration of Conformity ___

The RS485 1Channel modem meets the basic requirements according to Article 4 and Appendix III of Directive 89/336/EWG:

Electromagnetic Interference (EMI).

The modem complies with the followings standards:

- EN 55022 or EN 50081-1
- EN 55024 or EN 50082-1
- EN 50082-2 (Industrial use)

6 Operation

The RS485 1Channel Modem is a code transparent electro-optical transceiver.

Incoming data at the electrical interface is converted into optical signals and transmitted by optical fiber. The optical receiver at the other side recovers the optical signal to the corresponding RS485 format. The RS485-FO conversion takes place acc. to following scheme:

$$\begin{array}{lll} \mbox{U}_{\mbox{\tiny DIFF3/8}} \geq & +200\mbox{mV='High'} & \Rightarrow \mbox{ opt. Out=On} \\ \mbox{U}_{\mbox{\tiny DIFF3/8}} \leq & -200\mbox{mV='Low'} & \Rightarrow \mbox{ opt. Out=Off} \end{array}$$

The modem internal resistor termination (see block diagram) pulls the electrical busline into a defined state if the connected RS485 application driver changes to high impedance (HIGH-Z) condition.

! Please check your application to avoid any mismatch on the electrical busline caused by the modem internal termination!

7 Power Supply

The modem can be powerd by three ways:

A) +5V DC ±5% at Pin 6 Sub-D System ground at Pin 5


PCB Terminal must be unconnected.

B) +9..30V DC (unregulated) at PCB Terminal

A switching regulator generates the +5V power for the modem. Pin 6 is a +5V output with max. 50mA current load. Pin 7 must be unconnected

C) +9..30V DC (regulated) at Pin 7

A switching regulator generates the +5V power for the modem. PCB Terminal must be unconnected. Pin 6 is a +5V output with max. 50mA current load.

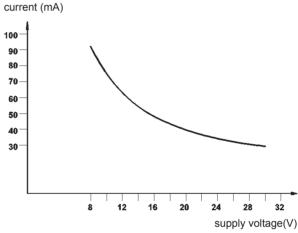


Pic. 3 current consumption

RS485 1Channel/Point to Point Link

8 Installation

 
- Place the modem at a suitable location
- Though the modem is hot pluggable, make sure that all equipment is off power to avoid electrical damage during installation
- connect the modem to the RS485 interface of your application
- connect the FO cable with the Fiber-Optic-Interface (see Pic. 4)
- · check all connections for correct configuration
- power up your system



9 RS485 Adaptation

The link between an active node and the FO interface should be a twisted pair cable with an impedance of Z=120 Ohm. If the node and the FO interface are powered by different power supplies, node system ground and FO Interface system ground should be connected (see example 1). This procedure avoids an overshot of the common mode input swing.


Example 1:

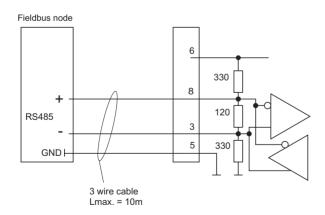

Pic. 5

For cable lengths over 10 m following termination should be used at the node (see example 2).

Example 2:

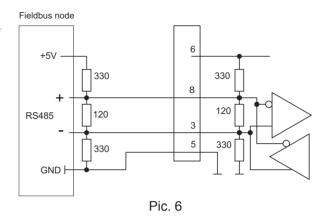


This circuit allows electrical cable length up to approx. 120m.

The max. transmission band width dependents on the cable length between the node and the FO Interface. The following formula shows you the dependence of max. transmission band width and cable length:

$$D_{MAX}(Hz)=L(m) \times (-8E^3) + 1E^6$$

 10 Device Sub-D Pin Out



Pic. 7

Pin Nr.	Name	Function
1	NC	not connected
2	NC	not connected
3	TxA / RxA	Data In/Out positiv
4	NC	not connected
5	Gnd	system ground
6	Vcc	+5V DC IN / OUT
7	V+	9 30V DC IN
8	TxB / RxB	Data In/Out inverted
9	NC	not connected

! Non declared pin are without function and should be left open. !



RS485 1Channel/Point to Point Link

Rev. A02

11 Maximum Ratings Power supply +V _____ +35V DC Power supply 5V _____ +5,5V DC RS485 driver current ____ 70mA Common mode input ____ voltage±12V Storage temperature ____ -55..+125°C Operating temperature ____ -40..+85°C

Stresses beyond those listed under 'Maximum Ratings' may cause permanent damage to the modem. These are stress ratings only, and functional operation of the modem at these conditions is not implied. Exposure to maximum rating conditions for extended periods may affect the modem reliability.

12 Technical Data

 $\begin{array}{ll} \text{data rate:} & 0 \dots 1 \text{ MBit/s} \\ \text{bit distortion:} & \text{max. \pm 200ns} \\ \text{max. opt. P}_{\text{out:}} : & 100 \mu\text{W} \, / \, 200/230 \mu\text{m} \end{array}$

27μW / 50/125μm 60μW / 62,5/125μm 700μW /980/1000μm

min. opt. P_{IN}: approx. 2µW Wavelength: 660nm, 850nm opt. interface: F-ST, F-SMA max. link length: 3000m GI-Fiber

2000m HCS-Fiber 70m PO-Fiber

data format el.: RS485

el. interface: 9-way Sub-D female power supply: +5V DC ±5% via Sub-D

or 9 .. 30V DC via Sub-D or 9 .. 30V DC via screw terminal

current consumption: 170mA (±10%) / 5V

IED indicators: green = Vcc

yellow = RxD (rec. Data)
Aluminium extruded

 
case: Aluminium extruded dimension: approx. 72x55x20mm


(LxWxH)

protection class: IP40

weight: approx. 100g temperature range: -40 .. +80°C

13 Technical Drawing _____



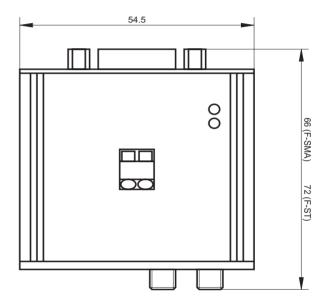

The information released by Ratioplast-Optoelectronics GmbH in this data sheet is believed to be accurate and reliable. However, no responsibility is assumed by Ratioplast-Optoelectronics GmbH for its use. Ratioplast-Optoelectronics GmbH reserves the right to change circuitry and specifications at any time without notification to the customer.